



# TiOC HOW TO GUIDE

How to set the Linkage Action when the alarm occurs, like PTZ action, e-mailing & snapshot

For an NVR-system

The following guide enables you to set up the Linkage Action Function on **Wiz Sense** (Series 3) and **Wiz Mind** (Series 5 & 7) NVR-systems.



## Series

NVR5000-1 Series



## Example

NVR5216-16P-1

**NB:** The firmware version is based on the latest version when this document was created and may slightly differ from future versions, however this will not affect any of the functionality.

Here we've used IVS as an example:

## Step 1: PTZ action and e-mailing

Go to  AI > "PARAMETERS" > "IVS", choose the channel you want to link with PTZ action and e-mailing, keep it  Enabled and click  Trigger icon.

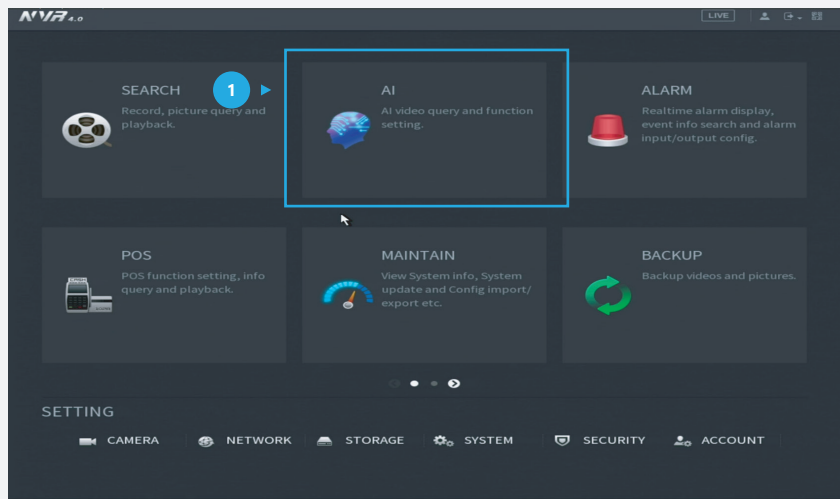


Figure 1: Start from the setup page of the NVR

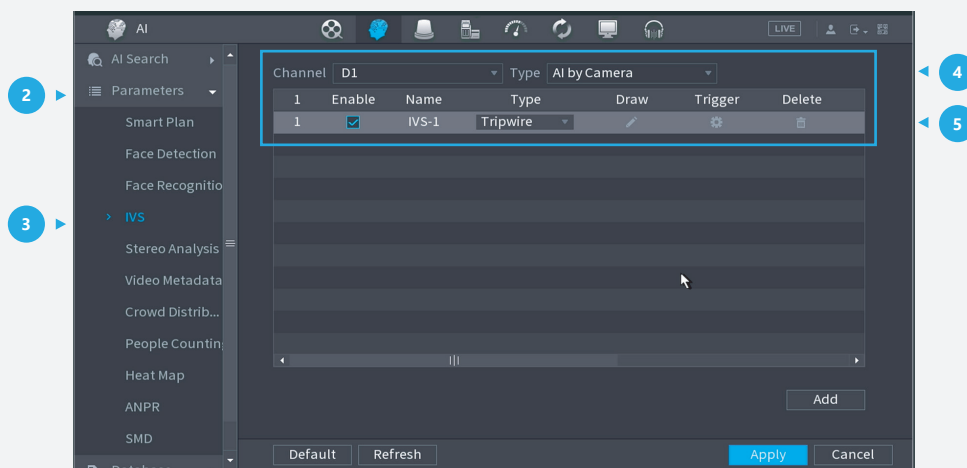



Figure 2: Click  to set PTZ action and e-mailing

**Step 2:** Activate the function  **Send Email** and/or *click* the function  **PTZ Linkage**.

Click **Apply** to save your settings.

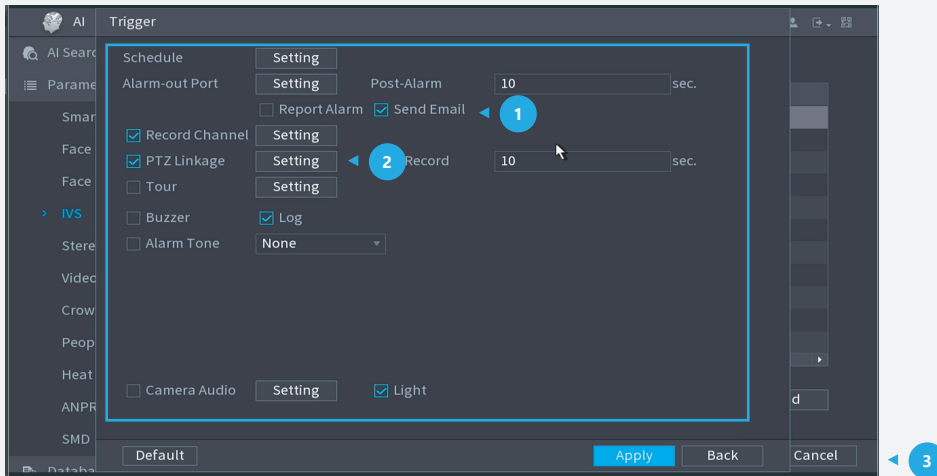


Figure 3: Trigger settings

## For Snapshot

**Set the record:** If you want to record motion detection, go to "Storage" > "Schedule", ensure the tab is set to **Snapshot**, check the channel is the one you want to set, and *click* **Settings**.

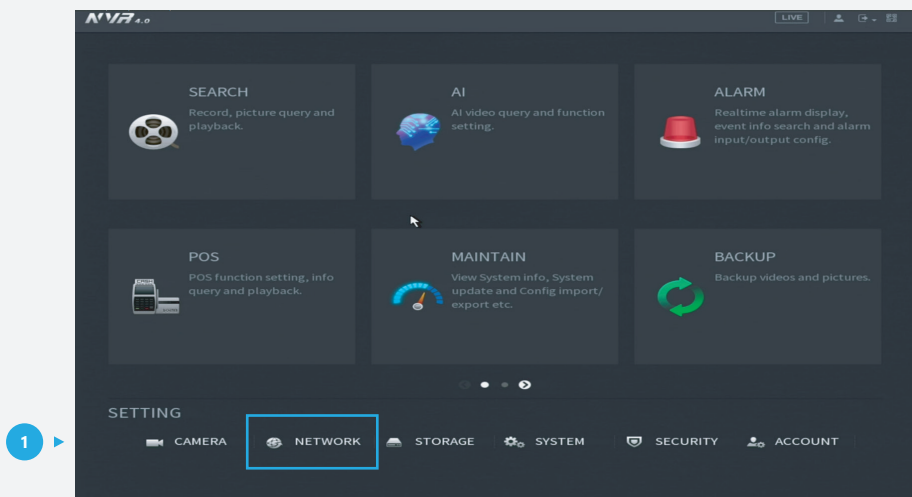


Figure 4: Start from the setup page of the NVR

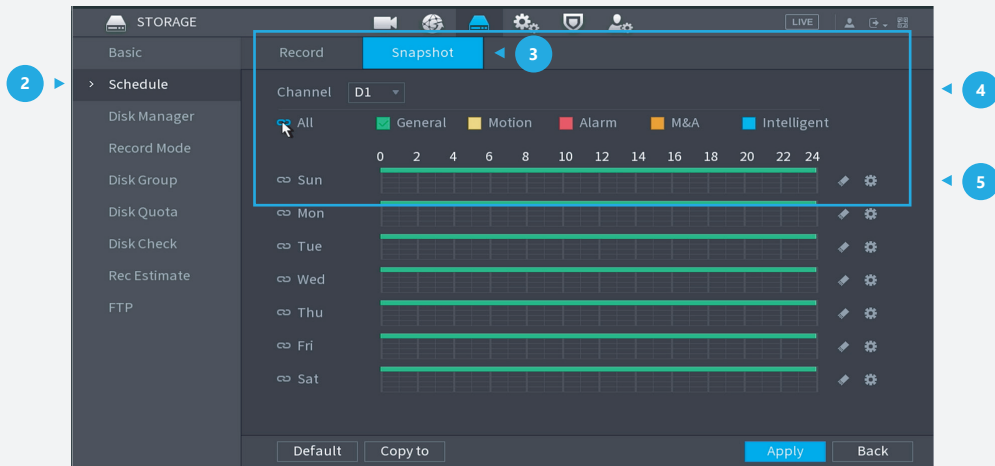


Figure 5: Setting the snapshot channel

On this page you can choose what kind of record can be stored. An example of "General" and "Motion Detection" are shown below.

Choose the day you want to record the event for motion detection, then **click OK** to save your settings.

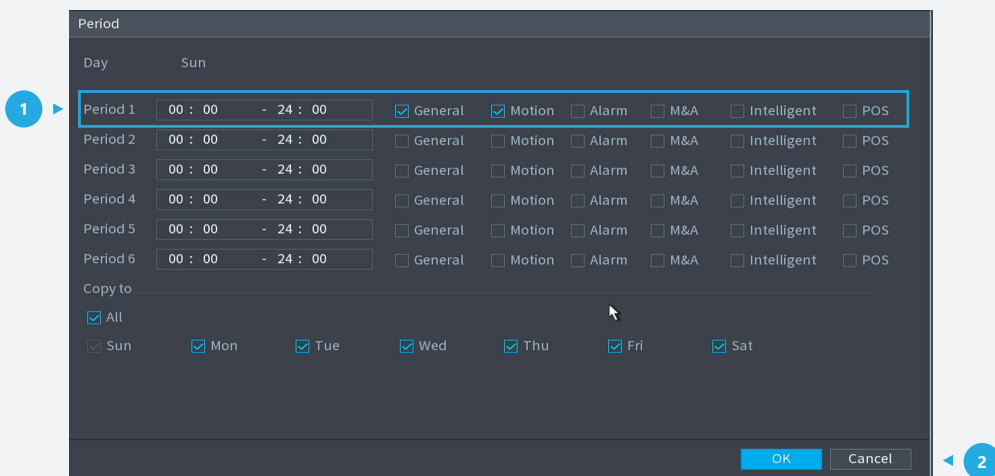


Figure 6: Setting the snapshot record time

\*Design and specifications are subject to change without notice.